

Video Settings:

Push the "Video" button to cycle through these different functions:

Component: Your DVD player.

S-Video: <Not Used!>

Video: Your VCR for videotapes.

Note: any other video sources should be connected through your VCR, once connected, use your VCR remote to select "Auxilliary" to view.

Push RGB to switch the Projector display back to the Computer. Your computer is connected to "RGB1".



Audio Settings:

When watching a DVD, push the DVD/DVR button on the Surround Stereo remote to hear the DVD.

Remember: you can play CD's this way as well in your DVD player!

Use the Tape/VCR button to hear sound from your VCR when playing video tapes or some other device hooked up to the inputs on your VCR.

The TV button on the remote will be used to play sound from your computer. If you are playing a movie or music on your classroom PC, use this button to hear it on the Surround system.

